3. Disassembly and Reassembly

3-1. Disassembly of COVER-MID ASSY

1) Detach GRILLE-BACK by pushing the hook.

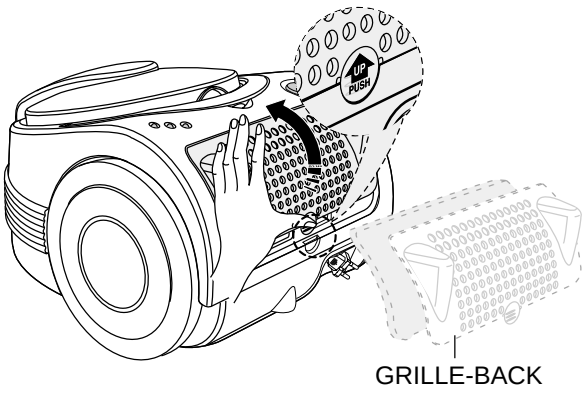

2) Open the COVER-DUST ASSY and after turning the LEVER-CASE and pull out CASE BASKET ASSY from the body of VACCUM CLEANER.

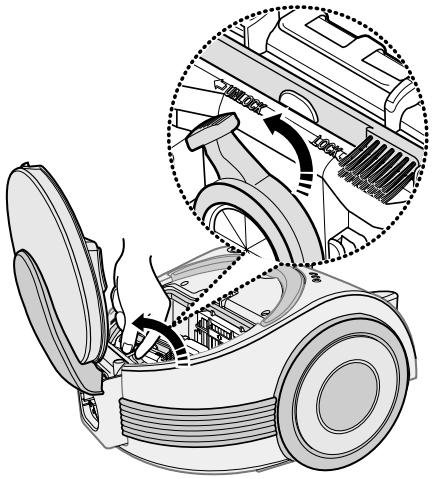

3) Separate the COVER-MID ASSY by loosening five screws.

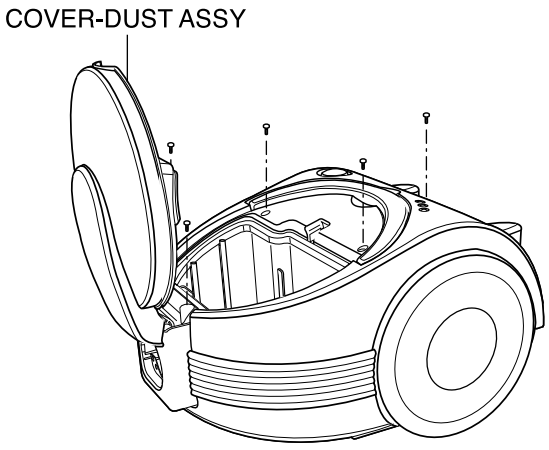

4) Separate the COVER-DUST ASSY and BODY MID by pushing out SHAFT WHEEL with a screw driver(+)

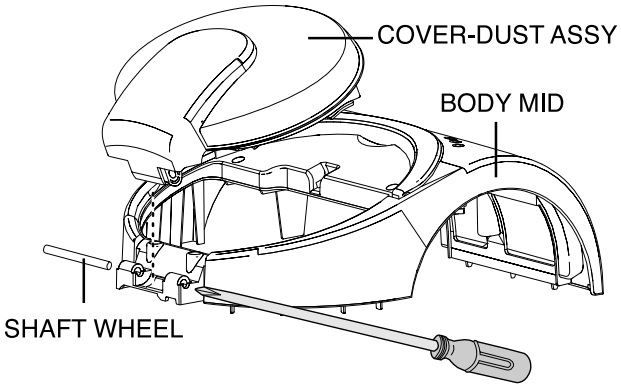

5) Release four screws and separate COVER DUST, COVER DUST LOW, DAMPER ASSY.

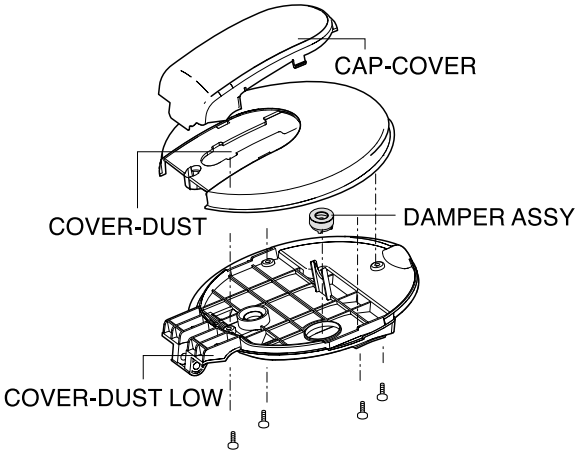

6) Turn up a BODY MID ASSY and detach the HANDLE ASSY, LEVER-BRAKE ASSY, BUTTON C/REEL with a flat head screw driver.

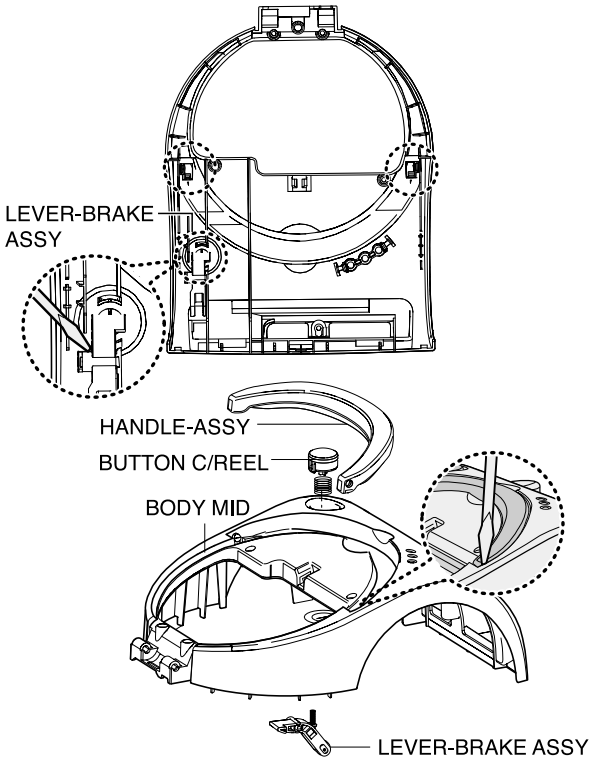

3-2. Disassembly of PBA MAIN

1) Detach the CONNECTOR-HOUSING and separate the PBA-MAIN by loosening a screw.

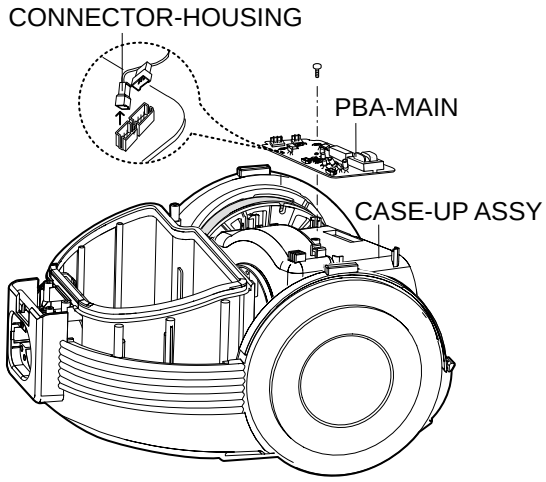

3-3. Disassembly of BODY-BASE ASSY

1) Loosen two screws from the CASE-UP ASSY and detach the CASE-UP ASSY, MOTOR FAN-AC, CASE-LOW ASSY after lift up the CORD-REEL ASSY.

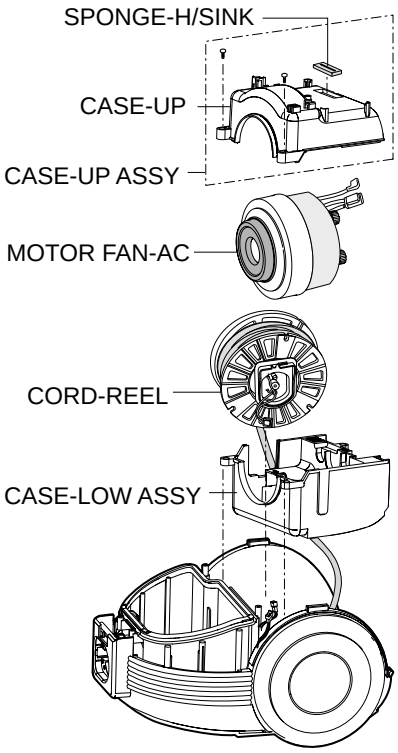

2) After separate the BAND-BODY L/R and PACKING DUST, detach the COVER-FRONT ASSY, SWITCH-PRESSURE and DAMPER SUCTION.

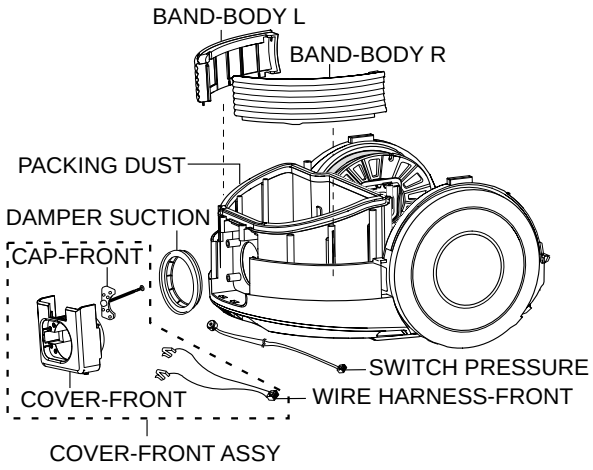

3-4. Disassembly of CORD REEL ASSY

1) After lift up the CORD-REEL ASSY, detach GUARD-CORD with a flat head screw driver.
2) Separate the CORD-REEL ASSY from BODY-BASE.

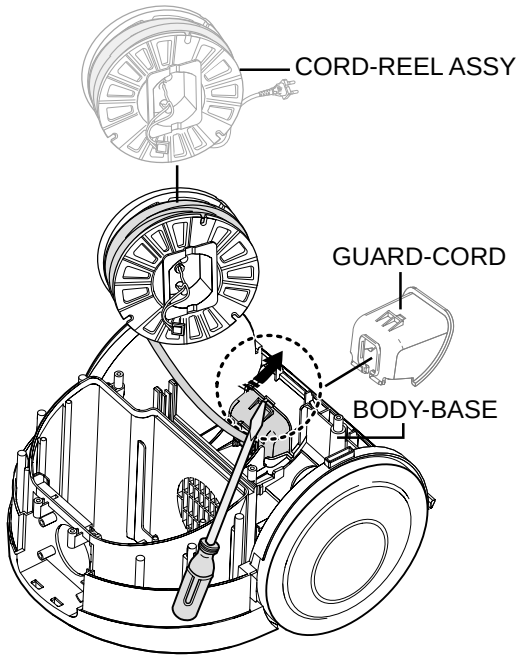

3-5. Assembly of CORD-REEL ASSY

1) Hold COVER-REEL and wind the power cord 4~5times.
2) When winding is completed, reassemble CORD-REEL ASSY immedlaterly into the body.

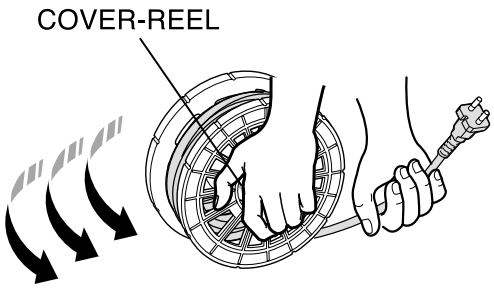

3-6. Replacement of MOTOR ASSY
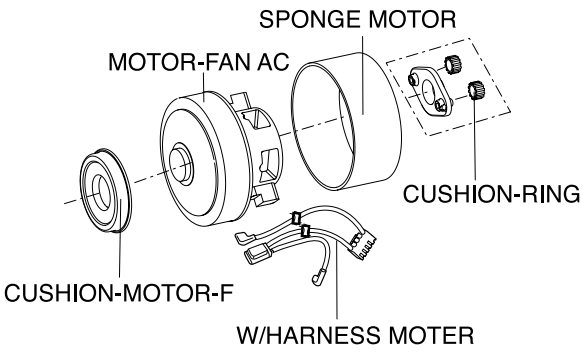
1) Separate the CUSHION-MOTOR F, SPONGE MOTOR and CUSHION RING from MOTOR-FAN AC.
2) Replace the MOTOR-FAN AC.